

1. Conduct a training session for CyberPoint users. Let them insert their key in a CyberPoint.
2. Insert the key straight into the lock, not at an angle.
3. Do not twist or turn the key while the key is inside the CyberPoint.
4. Wait until the key either beeps three times or flashes a steady green light with quick red flashes. This means that the transfer of information is completed between the CyberPoint and key.
5. For good electrical contact, it may occasionally be necessary to clean contaminants from the tip of the key and the face of the CyberPoint. CyberLock provides a stainless steel bristle brush that works well for doing this; please contact CyberLock for details.



**CyberLock, Inc.**

1105 N.E. Circle Blvd., Corvallis, OR 97330

541-738-5500 • Fax 541-738-5501 • [www.cyberlock.com](http://www.cyberlock.com) • [sales@cyberlock.com](mailto:sales@cyberlock.com) • [support@cyberlock.com](mailto:support@cyberlock.com)

CyberLock and CyberKey are registered trademarks of Videx, Inc. GCO2886