

## Fire – Rescue Talkgroups

Channel	Zone 1 Caroline FR	Zone 2 Caroline2 FR
1	FR Dispatch	FR Dispatch
2	FR Tac 2	FR Admin
3	FR Tac 3	FR Train1
4	FR Tac 4	FR Train2
5	FR Tac 5	FR Train3
6	FR Tac 6	OEM 1
7	FR Tac 7	OEM 2
8	FR Tac 8	OEM 3
9	PS Tac 1	Shelter 1
10	PS Tac 2	Shelter 2
11	CtyWide1	Shelter 3
12	CtyWide2	FR Cmd Staff
13	SO Dispatch	FR Log 1
14	FR Admin	FR Log 2
15	FR T/A	FR T/A
16	FR Dispatch	FR Dispatch

## Analog vs. Digital Sound Quality

**Analog** radio systems historically have the usual snap, crackle and pop along with the voice on a channel. When you heard more of that interference, you knew that the transmitting radio was getting close to the limits of coverage. You could also hear a “hiss” just before the transmitting radio began talking so you knew there was a transmission coming.

**Digital** radio systems remove all of the background interference noise and only pass the voice. The voice is converted into a digital stream and the system converts this stream into words spoken by the person transmitting. There will be no “hiss” before someone transmits,

**It is important to remember to keep the microphone for the radio or the speaker mic a few inches directly in front of your mouth. This will cut down on any background noise at the scene like sirens or other people talking loudly at the scene.**



## Caroline County Fire - Rescue



APX 4500 O2  
Mobile

Quick  
Reference  
Card

## Display Status Indicators


	Receiving a call or data.
	Transmitting a call or data.
	Received an Individual Call.
	The more stripes, the stronger the signal strength for the current site (trunking only)

	Direct radio-to-radio communication or communication through a repeater. <b>On</b> = Direct <b>Off</b> = Repeater		The vote scan feature is enabled.
	This channel is being monitored.		<b>On</b> = Secure operation. <b>Off</b> = Clear operation. <b>Blinking</b> = Receiving an encrypted voice call.
	Voice muting the affiliated trunking talkgroup or selected conventional channel. <b>On</b> = Enabled <b>Off</b> = Disabled		<b>On</b> = AES Secure operation. <b>Off</b> = Clear operation. <b>Blinking</b> = Receiving an encrypted voice call.
	<b>H</b> or <b>L</b> L = Radio is set at Low power. H = Radio is set at High power.		<b>On</b> = Location feature enabled, and location signal available. <b>Off</b> = Location feature disabled. <b>Blinking</b> = Location feature enabled, but location signal unavailable.
	Scanning a scan list.		<b>On</b> = User is currently associated with the radio. <b>Off</b> = User is currently not associated with the radio. <b>Blinking</b> = Device registration or user registration with the server failed due to an invalid username or pin.
	<b>Blinking dot</b> = Detects activity on the Priority-One Channel during scan. <b>Steady dot</b> = Detects activity on the Priority Two Channel during scan.		Data activity is present.
	Radio is in the view or program mode. <b>On steady</b> = View mode. <b>Blinking</b> = Program mode.		

# APX 4500 O2

APX 4500 O2 CH

## O2 Control Head

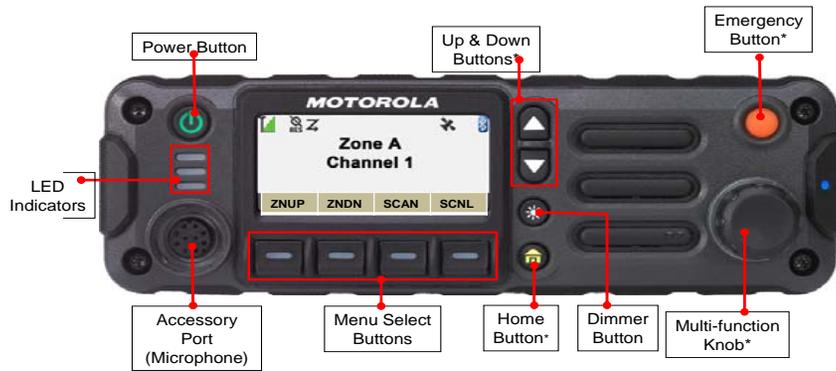

### Turning the Radio On/Off

- Press the Power On/Off button to toggle the power on or off.

### Adjusting the Volume

- Rotate the MFK clockwise to increase/counter clockwise to decrease.


### Display Intensity

- To adjust the display brightness, press the Dim button until the desired intensity is displayed.

### Receiving and Transmitting

- Take the microphone off the hook
- Select your Zone/Channel
- Listen for other transmissions
- Once the channel is clear, press the PTT button to transmit and release to receive.

#### Menu Navigation

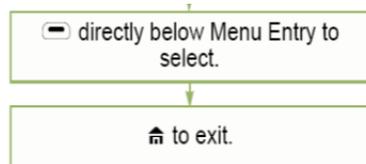

### To Select a Zone

- Press the button under ZNUP or ZNDN.

### To Select a Channel

- After a quick press to switch the MFK to channel mode, turn the knob to change channels OR use the arrow up or down.

**Home Button** - The 🏠 button returns you to the Home (default) screen. In most cases, this is the current mode. A long press of the Home button will automatically take you to a preprogrammed talkgroup (if programmed). For selected radio features, the 🏠 button is also used to save user-edited radio settings or information before returning you to the Home screen.

### Sending an Emergency Alarm

- Press the programmed **Emergency** button. A tone sounds and the display alternates between *EMERGENCY* and the home display. A series of high-pitched tone indicates the alarm has been received by the radio system central controller.
- **FIRE**- 1.5 second press and hold to activate. NO HOT MIC
- **NOTE:** To exit emergency at any time, press and hold the **Emergency** button until a steady tone is heard.

**Scan** – To activate, press the SCAN button.

#### Scan List

- To program your scan list, press the button under SCNL.
- Your priority one channel is your main dispatch talkgroup
- To add other members, navigate to the channel and press the SEL button to add to your scan list
- To delete a member, press the button under DEL. Press RCL repeatedly to view your list.